

 
Kodak Professional DCS 700 Series Digital Cameras




Quick Setup
for the DCS 700 Series Digital Cameras

YOUR CAMERA


Camera Front

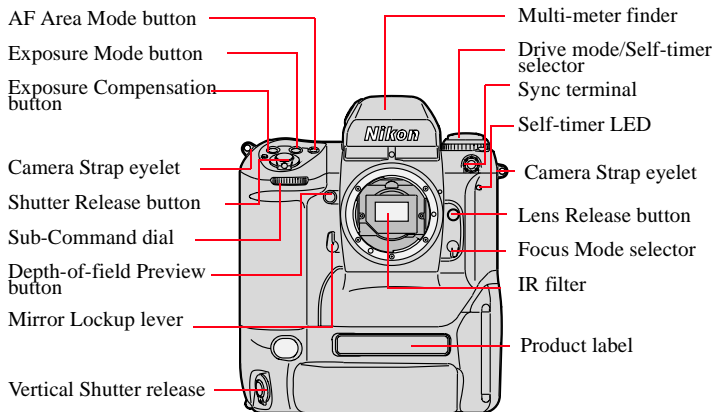


Camera Sides

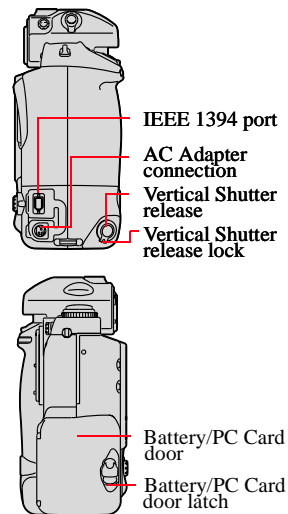 


Camera Back

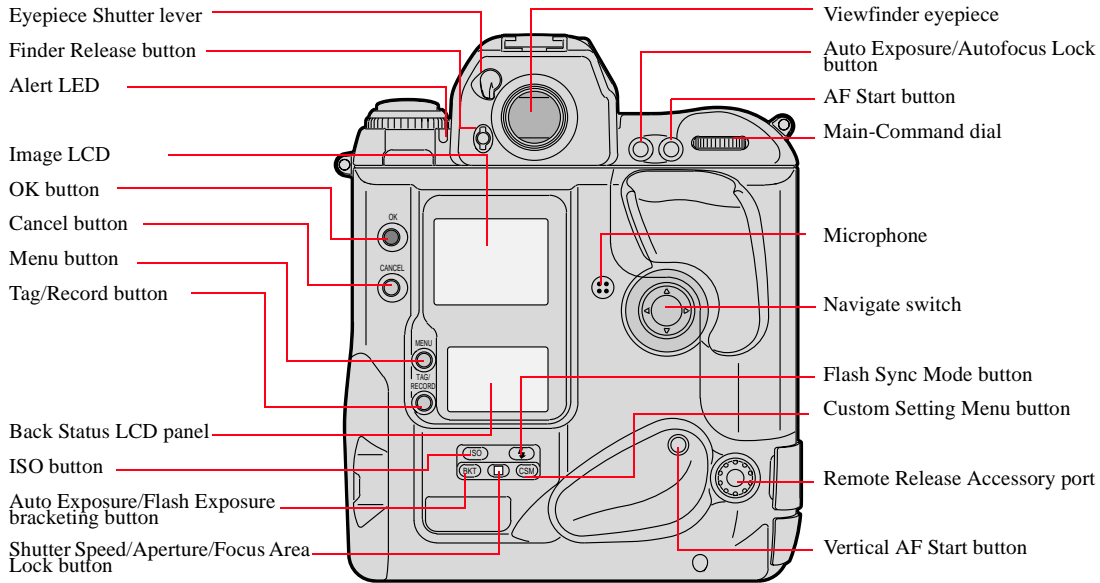 


Camera Top

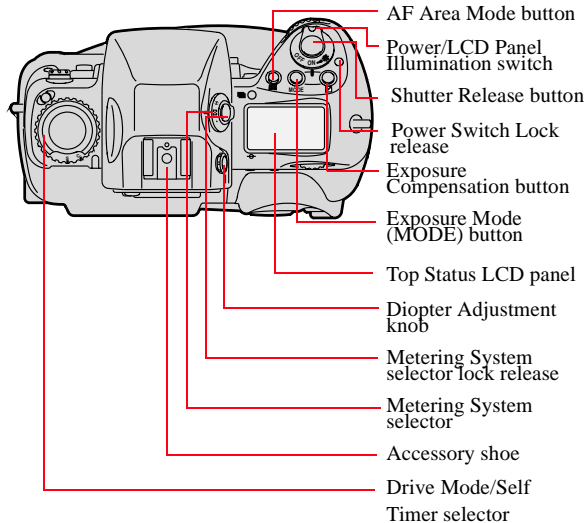 


Camera Bottom

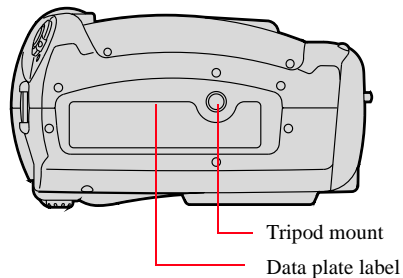 


Battery/PC Card door

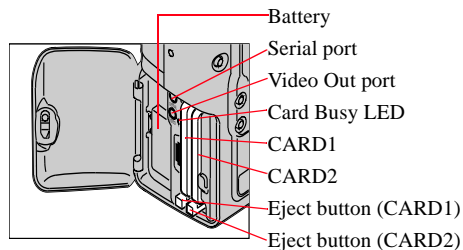 


Top Status LCD Panel

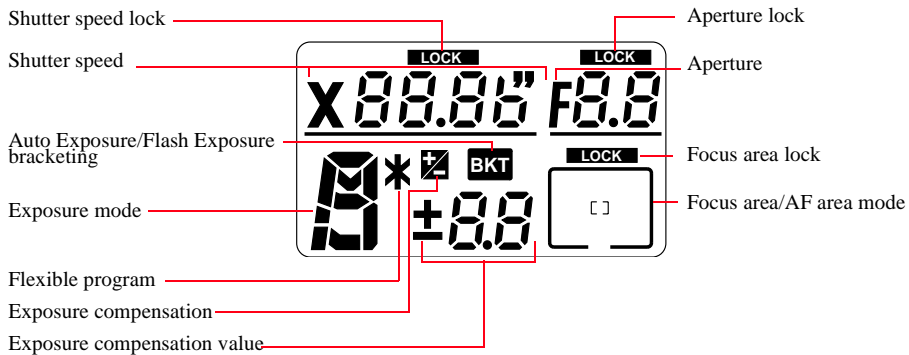 

Back Status LCD Panel

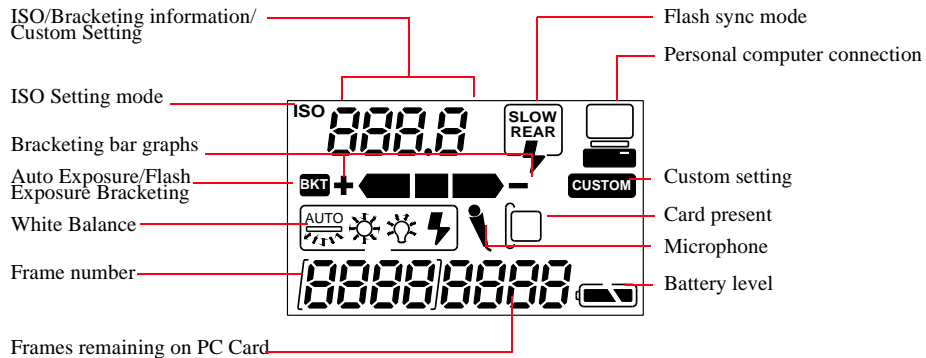 

Viewfinder

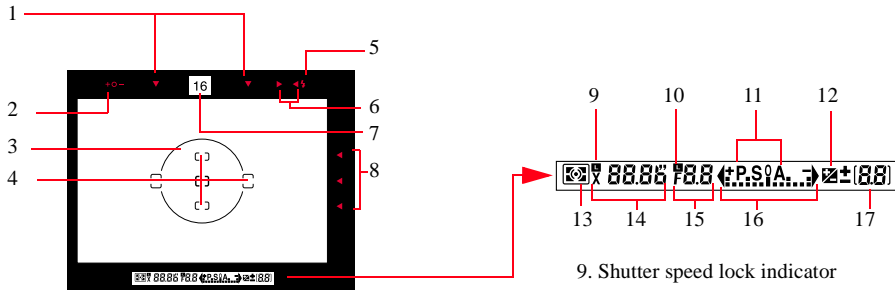 

1. Focus area indicators
2. Exposure level
3. Reference circle for Center-weighted metering
4. Focus brackets/Spot metering
5. Ready light
6. Focus indicators
7. Aperture direct readout
8. Focus area indicators

9. Shutter speed lock indicator
10. Aperture lock indicator
11. Exposure mode
12. Exposure compensation
13. Metering system
14. Shutter speed
15. Aperture
16. Electronic analog exposure display
17. Exposure compensation

Image LCD/Menu Bar

 
 
 
Folder icon

Menu icon

White Balance icon

Video icon (appears if Video is enabled using Main Menu)

Contrast icon

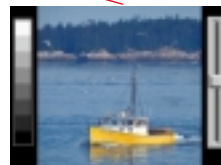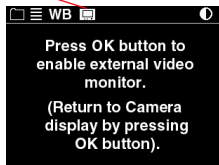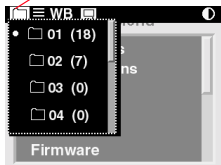

Turning the Image LCD On

There are two ways to turn the Image LCD on:

- ✓ Press the OK button to turn the Image LCD on in Display mode
- ✓ Press the Menu button to turn the Image LCD on with the Menu bar and the last-used menu displayed.

Turning the Image LCD Off


- ✓ Press the Cancel button to turn the Image LCD off.

If you turned the LCD on using the OK button and the LCD is not in Display mode, press the Cancel button more than once.

If you turned the LCD on using the Menu button, pressing the Cancel button once turns the LCD off without returning to Display mode.

Displaying and Navigating the Menu Bar

- 1 Turn the Image LCD on.
- 2 Press the Menu button to turn the Menu bar on.
- 3 Press the left or right side of the Four-way switch to highlight the needed Menu bar icon.
- 4 Press the Cancel button or Menu button to turn the Menu bar off.

 Alternatively you can press the Menu button to turn the Image LCD on with the Menu bar and the last-used menu displayed.

Making a Menu Selection

- 1 Navigate the Menu bar until the Folder or Menu icon is highlighted.

A dropdown menu lists the available options.



- 2 Press the top or bottom of the Four-way switch to highlight an option.
- 3 Press the OK button to activate the option.


Using the Image LCD and Digital Buttons

Turn the Image LCD on:	Press the OK button.
Select a highlighted menu option:	Press the OK button.
Enable Region of Interest box (Zoom mode):	Press the OK button.
Implement a zoom (Zoom mode):	Press the OK button.
Delete an image (Delete mode):	Press the OK button.
Toggle the Menu bar on/off:	Press the Menu button.
Turn the Image LCD off:	Press the Cancel button.
Dismiss a menu without implementing change:	Press the Cancel button.
Disable Region of Interest box (Zoom mode):	Press the Cancel button.
Navigate through images in all Display modes except Zoom mode when Region of Interest box is on:	Press the left or right side of the Four-way switch.
Navigate the Menu bar and display menus:	Press the left or right side of the Four-way switch.
Navigate a dropdown menu:	Press the top or bottom of the Four-way switch.
Change to a different display mode:	Press the top or bottom of the Four-way switch.
Move the Region of Interest box (Zoom mode):	Press any side of the Four-way switch.

Charging Batteries

You will need to charge a battery before using it for the first time, then whenever it is low.

- 1 Plug the cable from the charger's AC adapter into the battery charger jack.

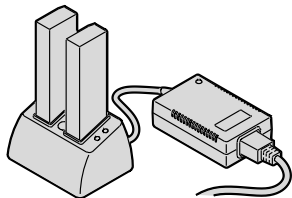


- 2 Select the power cord with the universal plug that is appropriate for your area.
- 3 Insert the appropriate end of the power cord into the receptacle on the rear of the charger AC adapter.

- 4 Plug the power cord into a wall outlet.
- 5 Insert one or two batteries into the slots on the top of the battery charger. (For one battery, you can use either slot).

On average, the charger will completely charge a battery in approximately one hour. If two batteries are inserted, it will charge them simultaneously.


- 6 Remove the battery or batteries from the charger when the lights on the charger turn green.

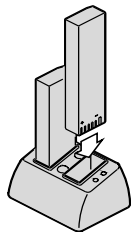


**INITIAL
SETUP**

INITIAL SETUP


Battery, PC Card and Lens

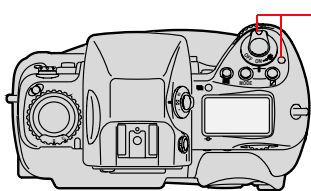

1 Turn the camera off by pressing the Power Switch Lock release and rotating the Power switch counter-clockwise.

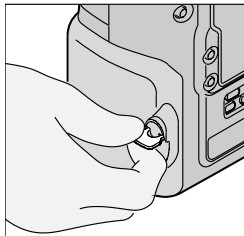


2 Lift the latch assembly on the Battery/PC Card door and turn it counterclockwise to open the door.

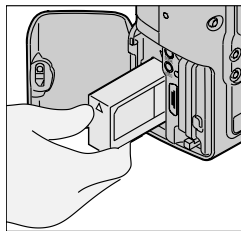


3 Insert the battery into the battery slot.


- 4** Insert a PC Card into either (or both) slots.
- 5** Turn the latch assembly clockwise and return it to its flat position to close the door.

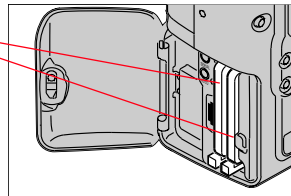

- 6** Position the lens in the camera's bayonet mount so that the mounting indexes on the lens and camera body are aligned. Taking care not to press the Lens Release button, twist the lens counterclockwise until it locks in place.

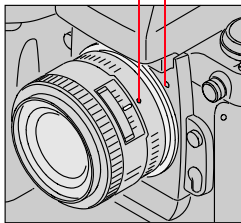


- 7** Turn the camera on by pressing the Power Switch Lock release and rotating the Power switch clockwise.

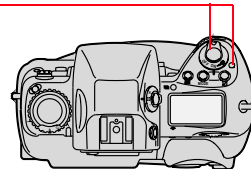



AC Adapter

- 1 When working indoors, you can conserve your battery and power your camera using the AC adapter provided with your camera.

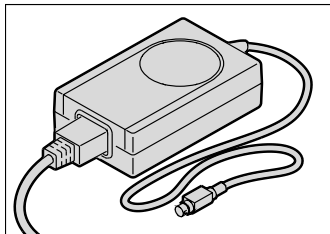

- 2 Plug the AC adapter into the round connector on the side of the camera.

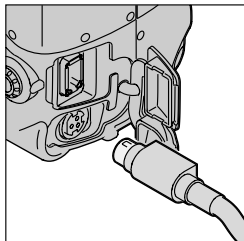

- 3 Select the power cord with the universal plug that is appropriate for your area.
 - 4 Plug the appropriate end of the power cord into the AC adapter.
 - 5 Plug the power cord into a wall outlet.
-  The AC adapter will not charge your battery.

Time and Date

- 1 Highlight the Menu icon and choose Main Menu from the dropdown menu.
- 2 Choose Time/Date from the Main menu.

The Date/Time screen appears.



- 3 Press the left or right side of the Four-way switch to sequence through the numeric fields.
- 4 Press the top or bottom of the Four-way switch to change the highlighted numeric value.
- 5 Press the OK or Cancel button.

**GENERAL
SETUP**

GENERAL SETUP

White Balance

There are two types of white balance: preset (which provides preset settings) and custom (which is based on a specific image). Refer to the User's Guide for information on Custom White Balance.



- 1 Highlight the White Balance icon.

The White Balance screen appears. A • symbol appears by the current setting.



- 2 Highlight your choice.

The White Balance icon on the Back Status LCD changes as shown.

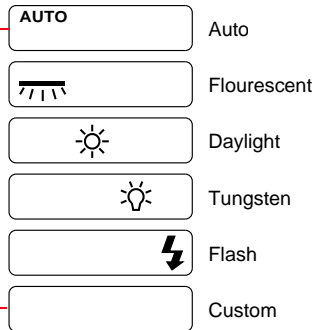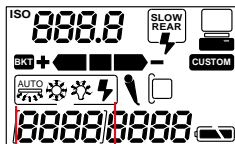


Auto - Flourescent


Folders

Images are stored in folders on a PC Card. You can specify a folder to hold subsequently captured images.

- 1 Highlight the Folder icon.

The Folder menu appears. It varies, depending on whether one or two cards are inserted.

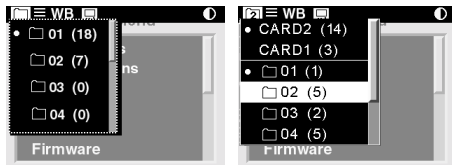

-  When two cards are inserted, folders on the active card appear.

- 2 Select a card if two are inserted.

- 3 Select a folder.

Camera Properties

You can use the Properties menu to change the following camera settings:

- ✓ Delay before Battery Save mode activation
- ✓ Delay before the Image LCD turns off
- ✓ View total number of camera actuations
- ✓ Default folder for image capture
- ✓ Video format
- ✓ Video signal


- 1 Highlight the Menu icon and choose Main menu from the dropdown menu.
- 2 Choose Properties from the Main menu.

The Properties menu appears.




- 3 Make your selection and change settings, as needed.
- ➡ Use the same technique described for setting the time and date to change the Battery Save Onset and Display Off Time.


Basic Settings

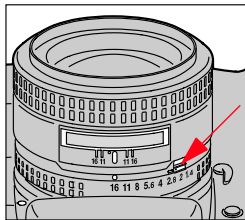


- 1 Set the lens to its minimum aperture (f/16).
- 2 Slide the lock lever towards the aperture ring so that the white dot on the tab aligns with the orange dot.

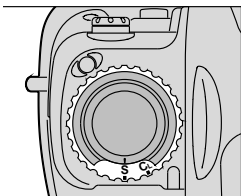

- 3 Set the Drive mode selector to **S** for Single-frame shooting.

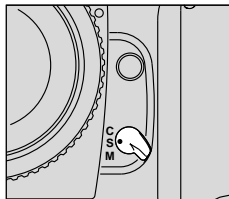


- 4 Set the Focus Mode selector to **S** for Single Servo AF.

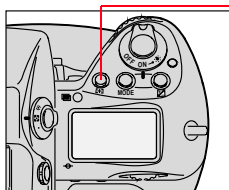


- 5 Press and hold the AF Area Mode button and rotate the Main-Command dial to select Single Area AF mode.

**CAPTURING
IMAGES**

CAPTURING IMAGES

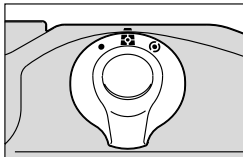


6 While pressing the lock release, set the Metering System selector for 3D Color Matrix Metering.

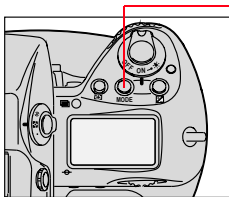

7 Press and hold the Exposure Mode button and rotate the Main-Command dial to select Programmed Auto exposure mode.



8 Press the Navigate switch to position the focus brackets on the main subject.

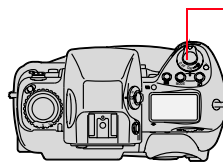

9 Lightly press the Shutter Release button.



10 Confirm that a green • appears inside the viewfinder (indicating successful focusing), then fully depress the Shutter Release button to capture the image.

Reviewing Images

You can review images on the active PC Card in one of five Display modes:

- ✓ Single Image mode - displays 1 image.
- ✓ Zoom mode - zooms to 1:3 or 1:1.
- ✓ Histogram mode - displays a histogram and other information about the image.
- ✓ Multiple Image mode- displays 4 images.
- ✓ Delete mode - deletes 1 image a time.
There is an option in the Main menu for deleting more than 1 image.

Selecting a Display Mode

- 1 Press the OK button to turn the Image LCD on or, if a menu is displayed, press the Cancel or Menu button to return to Display mode.
- 2 Press the top or bottom of the Four-way switch to sequence through the Display modes in the order shown below.

A pop-up appears briefly with the active mode highlighted.



CAMERA
IMAGES

Navigating Through Images

Press the left or right side of the Four-way switch to navigate through images in the selected folder.

- ☞ This works in all Display modes except Zoom mode when the Region of Interest box is enabled.

Enabling/Disabling the Region of Interest Box in Zoom Mode

In Zoom mode you can pan or zoom when the Region of Interest box is enabled or navigate to a different image when it is disabled.

Press the OK button to enable, or the Cancel button to disable the Region of Interest box.

Selecting an Image

As you navigate through images, they are highlighted one at a time. Release the Four-way switch when the desired image is highlighted.

Tagging Images or Recording Sounds

You can tag images that you do NOT want to delete or record sounds to be associated with an image.

The tags remain when you open tagged images in the DCS Host software (included) and can be used there when selecting images.


- 1 Select any Image Review mode.
- 2 Select an image.
- 3 Press and release the Tag/Record button quickly (less than one second) to tag or un-tag an image, or press and hold the button to activate the camera's microphone and record a sound.

Display Contrast

You can adjust the contrast on the Image LCD (not on the actual images):

- 1 Highlight the Contrast icon.

The Contrast screen appears.

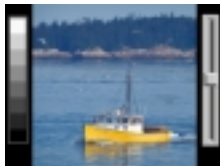

- 2 Press the top or bottom of the Four-way switch to move the slider bar up to lighten, or down to darken the displayed image.

Deleting Multiple Images

You can delete all images in a folder, all untagged images in a folder, all images on a PC Card, or all untagged images on the card.

- 1** Tag any images that you DO NOT want to delete (if you plan to use a tagged option).
- 2** Highlight the Menu icon and choose Main Menu from the dropdown menu.
- 3** Choose Delete Images from the Main menu.
The Delete Images menu appears.
- 4** Select the desired option.
- 5** When prompted, press the OK or Cancel button.





EASTMAN KODAK COMPANY
Kodak Professional Division
Rochester, New York 14650

www.kodak.com/go/professional

© Eastman Kodak Company, 2001.

TM: Kodak and Kodak Professional
P/N 4E3622